
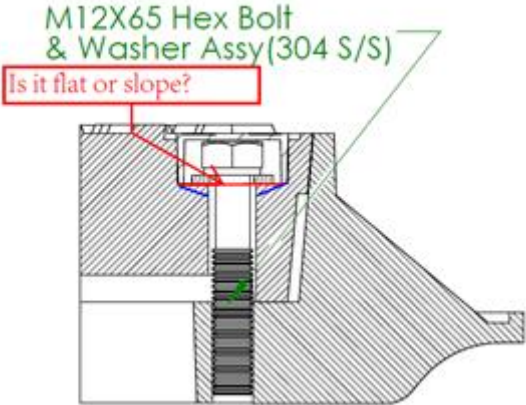


Date: 28-03-19

Revision: A

Cover Inspection Procedure

Step	Description
1	Remove cover
2	Check to see if concrete or debris is in between cover. If so then remove debris and grease.
3	Check seat is level using a feeler gauge. If the seat is not level, we recommend replacing cover. 
4	Reseal with grease
5	Check bolt seat is flat. If the bolt seats are sloped, then we recommend replacing the cover. 
6	Insert new bolt and washer.
7	Check if cover is rocking with bolts tightened.